



RALM 3820 SET			
Pozice	Obj.číslo	Popis	Počet ks
1	RALM3820-1	Connecting rod buckle-1	2
2	RALM3820-2	Rear connecting rod	1
3	RALM3820-3	Adjusting lever handle	1
4	RALM3820-4	Mechanism screw	1
5	RALM3820-5	Flat gasket	5
6	RALM3820-6	Adjusting lever	1
7	RALM3820-7	Adjusting lever torsion spring	1
8	RALM3820-8	Connecting rod buckle-2	1
9	RALM3820-9	Adjusting lever base	1
10	RALM3820-10	Adjusting lever Rotating shaft	1
11	RALM3820-11	Flat gasket	1
12	RALM3820-12	Press plate	6
13	RALM3820-13	Self tapping screw	55
14	RALM3820-14	Base plate	1
15	RALM3820-15	Base cover	1
16	RALM3820-16	Adjusting spring	1
17	RALM3820-17	Front connecting rod	1
18	RALM3820-18	Front wheel cap	2
19	RALM3820-19	Front wheel	2
20	RALM3820-20	Front wheel shaft	1
21	RALM3820-21	Flat gasket	7
22	RALM3820-22	splitpin	8
23	RALM3820-23	Hex flange bolt	1
24	RALM3820-24	Blade	1
25	RALM3820-25	Blade holder	1
26	RALM3820-26	Upper housing	1
27	RALM3820-27	Inserting seat	2
28	RALM3820-28	Pole piece	4
29	RALM3820-29	Battery seat	1
30	RALM3820-30	magnet	1
31	RALM3820-31	Self tapping screw	1
32	RALM3820-32	Upper cover	1
33	RALM3820-33	Battery	2
34	RALM3820-34	Battery cover	1
35	RALM3820-35	Switch	2
36	RALM3820-36	Press plate	1
37	RALM3820-37	Switch board	1
38	RALM3820-38	The calibration panel	1
39	RALM3820-39	Countersunk head self tapping screw	2
40	RALM3820-40	Single switch	1
41	RALM3820-41	Top cover handle - bottom	1
42	RALM3820-42	Top cover handle - top	1
43	RALM3820-43	Diode assembly	1
44	RALM3820-44	Cement resistance	1
45	RALM3820-45	In terminal wire 1	1

46	RALM3820-46	In terminal wire 1	1
47	RALM3820-47	In terminal wire 2	1
48	RALM3820-48	In terminal wire 3	1
49	RALM3820-49	In terminal wire 5	1
50	RALM3820-50	Cable sheath	1
51	RALM3820-51	Switch button	1
52	RALM3820-52	The connecting line	1
53	RALM3820-53	Switch button spring	1
54	RALM3820-54	Top cover of switch box	1
55	RALM3820-55	Switch button	1
56	RALM3820-56	Switch the trigger	2
57	RALM3820-57	Upper handle	1
58	RALM3820-58	Switch	1
59	RALM3820-59	Press plate	1
60	RALM3820-60	Switch box lower cover	1
61	RALM3820-61	Switch lover spring	1
62	RALM3820-62	End cap	2
63	RALM3820-63	Back cover spring	1
64	RALM3820-64	Back cover shaft	1
65	RALM3820-65	Back cover	1
66	RALM3820-66	L-shape press plate	1
67	RALM3820-67	Grass bag handle	1
68	RALM3820-68	Grass bag transparent cover	1
69	RALM3820-69	Grass bag cover	1
70	RALM3820-70	Bag shelf	1
71	RALM3820-71	Bag	1
72	RALM3820-72	Square neck bolt	2
73	RALM3820-73	Lower handle	1
74	RALM3820-74	Connecting cable buckle	1
75	RALM3820-75	Back wheel cap	1
76	RALM3820-76	Back wheel	1
77	RALM3820-77	Back wheel shaft	1
78	RALM3820-78	Motor	1
79	RALM3820-79	Left lower bar fixed block	1
80	RALM3820-80	Left lower bar adjusting block	2
81	RALM3820-81	Housing	1
82	RALM3820-82	Hex flange bolt	2
83	RALM3820-83	Flat gasket	5
84	RALM3820-84	Right lower bar fixed block	1
85	RALM3820-85	Right lower bar adjusting block	1
86	RALM3820-86	Screw pin	4
87	RALM3820-87	Quick lock bolt	4
88	RALM3820-88	Calibration panel pad	1
89	RALM3820-89	Class C big gasket	1