



RAPS 2020 SET		
Pozice	Popis	Pocet
RAPS2020_01	Screw	4
RAPS2020_02	Center supporter	1
RAPS2020_03	Fixture button	2
RAPS2020_04	Small gasket	2
RAPS2020_05	Motor upper housing	1
RAPS2020_06	Rotate gear	2
RAPS2020_07	Rotate spring	2
RAPS2020_08	Screw	2
RAPS2020_09	Front gearbox upper housing	1
RAPS2020_10	Gearbox assembly	1
RAPS2020_11	Push button spring	1
RAPS2020_12	Connector push button	1
RAPS2020_13	Front gearbox lower housing	1
RAPS2020_14	Press plate	1
RAPS2020_15	Motor lower housing	1
RAPS2020_16	Screw	13
RAPS2020_17	Upper tube	1
RAPS2020_18	Locate button	1
RAPS2020_19	End cap	1
RAPS2020_20	Telescopic tube sleeve	1
RAPS2020_21	Tube sleeve	1
RAPS2020_22	Lock sleeve	1
RAPS2020_23	Lock button	4
RAPS2020_24	Middle sleeve	1
RAPS2020_25	Locate button	1
RAPS2020_26	End cap	1
RAPS2020_27	Telescopic tube sleeve	1
RAPS2020_28	Tube inner liner	1
RAPS2020_29	Lock sleeve	1
RAPS2020_30	Lower tube	1
RAPS2020_31	Aluminium tube sleeve	1
RAPS2020_32	Fix ring 1	1
RAPS2020_33	Fix ring 2	1
RAPS2020_34	Auxiliary handle	1
RAPS2020_35	Auxiliary handle lock sleeve	1
RAPS2020_36	Locate gasket	1
RAPS2020_37	Lock trigger	1
RAPS2020_38	Elastic pin	1
RAPS2020_39	Nut	1
RAPS2020_40	Lock knob	1
RAPS2020_41	Male plug	1
RAPS2020_42	Inner sleeve	1
RAPS2020_43	Handle lock sleeve	1
RAPS2020_44	Screw	2

RAPS2020_45	Belt spring	1
RAPS2020_46	Left handle	1
RAPS2020_47	Left handle decoration cover	1
RAPS2020_48	Screw	4
RAPS2020_49	Female base	1
RAPS2020_50	Battery connecter plate	2
RAPS2020_51	Female plug cover	1
RAPS2020_52	Screw	1
RAPS2020_53	Micro switch	1
RAPS2020_54	Switch trigger	1
RAPS2020_55	Battery connector	1
RAPS2020_56	Trigger spring	1
RAPS2020_57	Lock button spring	1
RAPS2020_58	Lock button	1
RAPS2020_59	Battery right connector	1
RAPS2020_60	Screw	1
RAPS2020_61	Screw	9
RAPS2020_62	Right handle	1
RAPS2020_63	Right handle decoration cover	1
RAPS2020_64	Pole	2
RAPS2020_65	Pole seat	1
RAPS2020_66	Diode	1
RAPS2020_67	Belt	1