



| 1 | foam pipe | _ |
|----|--------------------------|---|
| 2 | stop lever | |
| 3 | Self-propelled Lever | |
| 4 | upper handrail | |
| 5 | Rope Guide | |
| 6 | Cap nut | |
| 7 | Brake Cable Assy plate | |
| 8 | Bolt | |
| 9 | Self-locking nut | |
| 10 | Plastic stopper | |
| 11 | brake cable | |
| 12 | selfpropelled cable | |
| 13 | quick fix knob | |
| 14 | Pin | |
| 15 | Quick Fix Handle | |
| 16 | lock for fast fix handle | |


| 17 | flat washer | |
|----|--|--|
| 18 | lock nut | |
| 19 | Hexagon nut | |
| 20 | lower handrail | |
| 21 | fastener | |
| 22 | Hexagon head bolts | |
| 23 | Half round head square neck boltsbolts | |
| 24 | Hex lock nut | |
| 25 | triangle knob | |

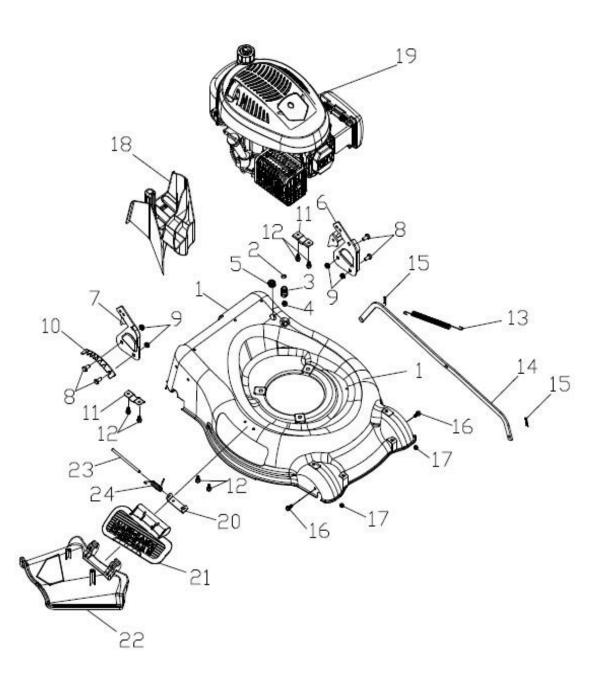

| Item description | |
|-----------------------------|--|
| deck welding assy. | |
| "O" ring | |
| inlet | |
| Pipe connector nut | |
| cable stopper | |
| left handle bracket | |
| left handle bracket | |
| Hexagon head bolts | |
| Hex lock nut | |
| height adjustment board | |
| rear drive bracket | |
| Hex tapping screws | |
| Pull Spring for Pull Rod | |
| Height Adjustment Pull Rod | |
| R type pin | |
| Bolt | |
| Self-locking nut | |
| mulching plug | |
| petrol engine | |
| Bracket plate for defelctor | |
| mulching board | |
| side discharge cover | |
| Mulch Shaft | |
| mulch board spring | |
| | deck welding assy. "O" ring inlet Pipe connector nut cable stopper left handle bracket left handle bracket Hexagon head bolts Hex lock nut height adjustment board rear drive bracket Hex tapping screws Pull Spring for Pull Rod Height Adjustment Pull Rod R type pin Bolt Self-locking nut mulching plug petrol engine Bracket plate for defelctor mulching board side discharge cover Mulch Shaft |

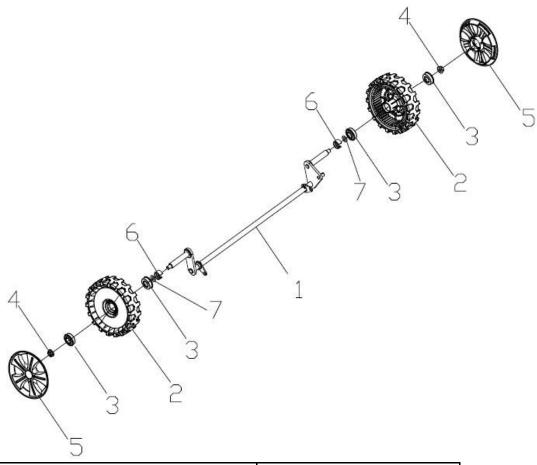



| 1 | front drive assy. | front drive assy. |
|---|------------------------|------------------------|
| 2 | wheel assy. | wheel assy. |
| 3 | wheel punch bearing | wheel punch bearing |
| 4 | Self-locking nut | Self-locking nut |
| 5 | outer cover of hub | outer cover of hub |
| 6 | front bracket fastener | front bracket fastener |
| 7 | flat washer | flat washer |

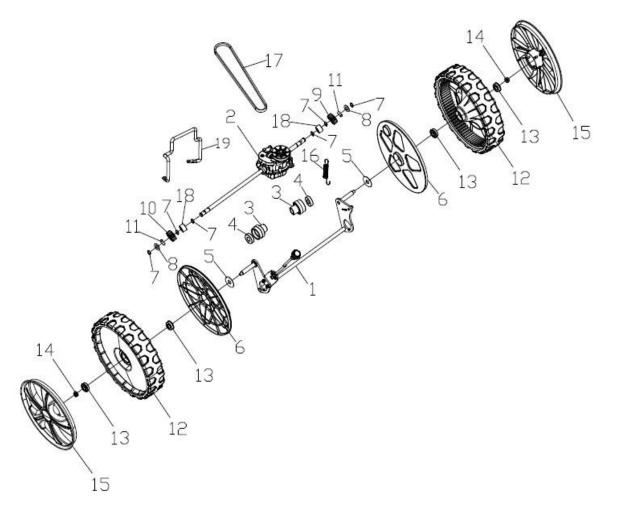

| Pol.č. | Item description | |
|--------|------------------------------|---|
| 1 | rear drive assy. | |
| ' | height adjustment ball | |
| 2 | selfpropelled assy. | |
| 3 | rear wheel axle sleeve | |
| 4 | bearing | |
| 5 | Gasket | |
| 6 | inner cover of hub | |
| 7 | spring washer | |
| 8 | selfpropelled ratchet washer | |
| 9 | Ratchet Wheel L | |
| 10 | Ratchet Wheel R | |
| 11 | bratchet pin | |
| 12 | wheel assy. | |
| 13 | wheel punch bearing | |
| 14 | Self-locking nut | |
| 15 | outer cover of hub | |
| 16 | selfpropelled spring | |
| 17 | v belt | |
| 18 | rear wheel axle sleeve | _ |
| 19 | Brake spring | |

| 545560-6 | |
|-----------|--|
| S511VHY-T | |
| | |

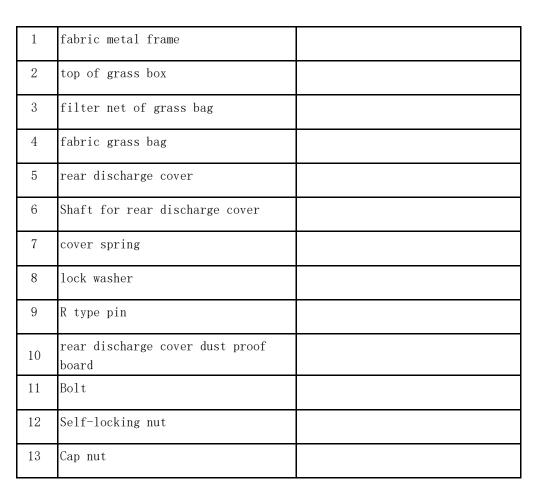

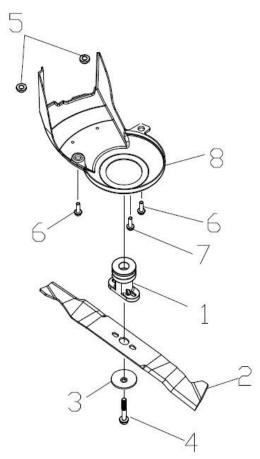

| 1 | Blade Adapter Assy | |
|---|-----------------------|--|
| 2 | blade | |
| 3 | blade washer | |
| 4 | Inch hex flange bolts | |
| 5 | Chassis bushing | |
| 6 | Hex flange bolts | |
| 7 | Hex flange bolts | |
| 8 | belt cover | |

| 1 | Blade Adapter Assy | |
|---|--------------------|--|
| 2 | blade | |
| 3 | wheel assy. | |
| 4 | outer cover of hub | |
| 5 | wheel assy. | |
| 6 | outer cover of hub | |

| 7 | wheel punch bearing | |
|----|----------------------|--|
| 8 | belt cover | |
| 9 | v belt | |
| 10 | mulching board | |
| 11 | side discharge cover | |
| 12 | quick fix knob | |

| 13 | Pin | |
|----|------------------|--|
| 14 | Quick Fix Handle | |
| 15 | flat washer | |
| 16 | lock nut | |