


Spare parts list for RPB260 Transmission

Pozice	Obj.číslo	Popis	Počet
2	11402-502810-000	Support -Output	1
3	04-32114-253	Screw with Washer	3
4	09-32182-253	Screw/GB/T 9704/M6×25	2
5	09-32179-253	Screw/GB/T9704/M6×20	4
6	11402-505170-000	Oil Bearingφ23.5×20	6
7	11530-502210-000	Aluminous Pipeφ26×745	1
7-1	11530-502230-000	Aluminous Pipe	1
8	11530-504010-000	Drive Shaftφ8×755	1
8-1	11530-504210-000	Shaft φ8×755	1
8-2	11415-500910-000	Connection Shaft20CrMo	1
9	11502-425620-C20	Handle	1
10	03-01110-353	Nut Gb/T41-2000/M5	1
11	11404-532140-JR0	Pothook	1
12	11404-532150-JR0	Support	1
13	04-15119-253	Screw/M5×16	1
14	11502-411690-JR0	Clip	2
15	04-15182-253	Screw M6X25/GB/T70.1	4
16	11506-424360-000	Up Plate	1
17	11506-424370-000	Middle Plate	1
18	11506-424450-JR0	Support	2
19	11506-424380-000	Down Plate	1
20	04-66180-253	Screw/M6X22	4
21	11401-532790-KD0	Up Plate	1
22	11401-532720-JR0	Protection Plate	1
23	06-65507-253	Screw/GB/T 845-1985/ST4.8×14	1
24	11501-532420-K10	Small Blade	1
25	11503-532430-JR0	Plate	1
26	06-04420-253	Screw ST4.2×32	2
27	11503-532440-KD0	Down Plate	1
28	11402-503030-000	Gear Box Assyφ26×9T	1
29	11502-651070-JR0	Cover-Nylon Cutter	1
30	11501-650210-K30	Spring	1
31	11501-651410-CA0	Nylon Line	1
32	11501-650230-JR0	Rope Shaft-Nylon Cutter	1
33	11501-650240-000	Protection Cover-Nylon Cutter	2
34	11501-650250-JR0	Support -Nylon Cutter	1
35	11401-651030-JW0	Three Teeth Blade	1
36	11530-505090-000	Pin Handle	1
37	11402-571990-000	Spring	1
38	11530-501320-000	Pin	1
39	11401-501330-KD0	Pin Support	1
40	04-15186-253	Screw/GB/T 70.1/M6×35	1

41	11530-501340-000	Conection Set	1
42	11530-501350-000	Handle	1
ZC1	11501-532710-JR0	Protection Plate	1
ZC2	11406-650100-000	Bump Head	1
ZC3	11530-505080-000	Conection Set	1

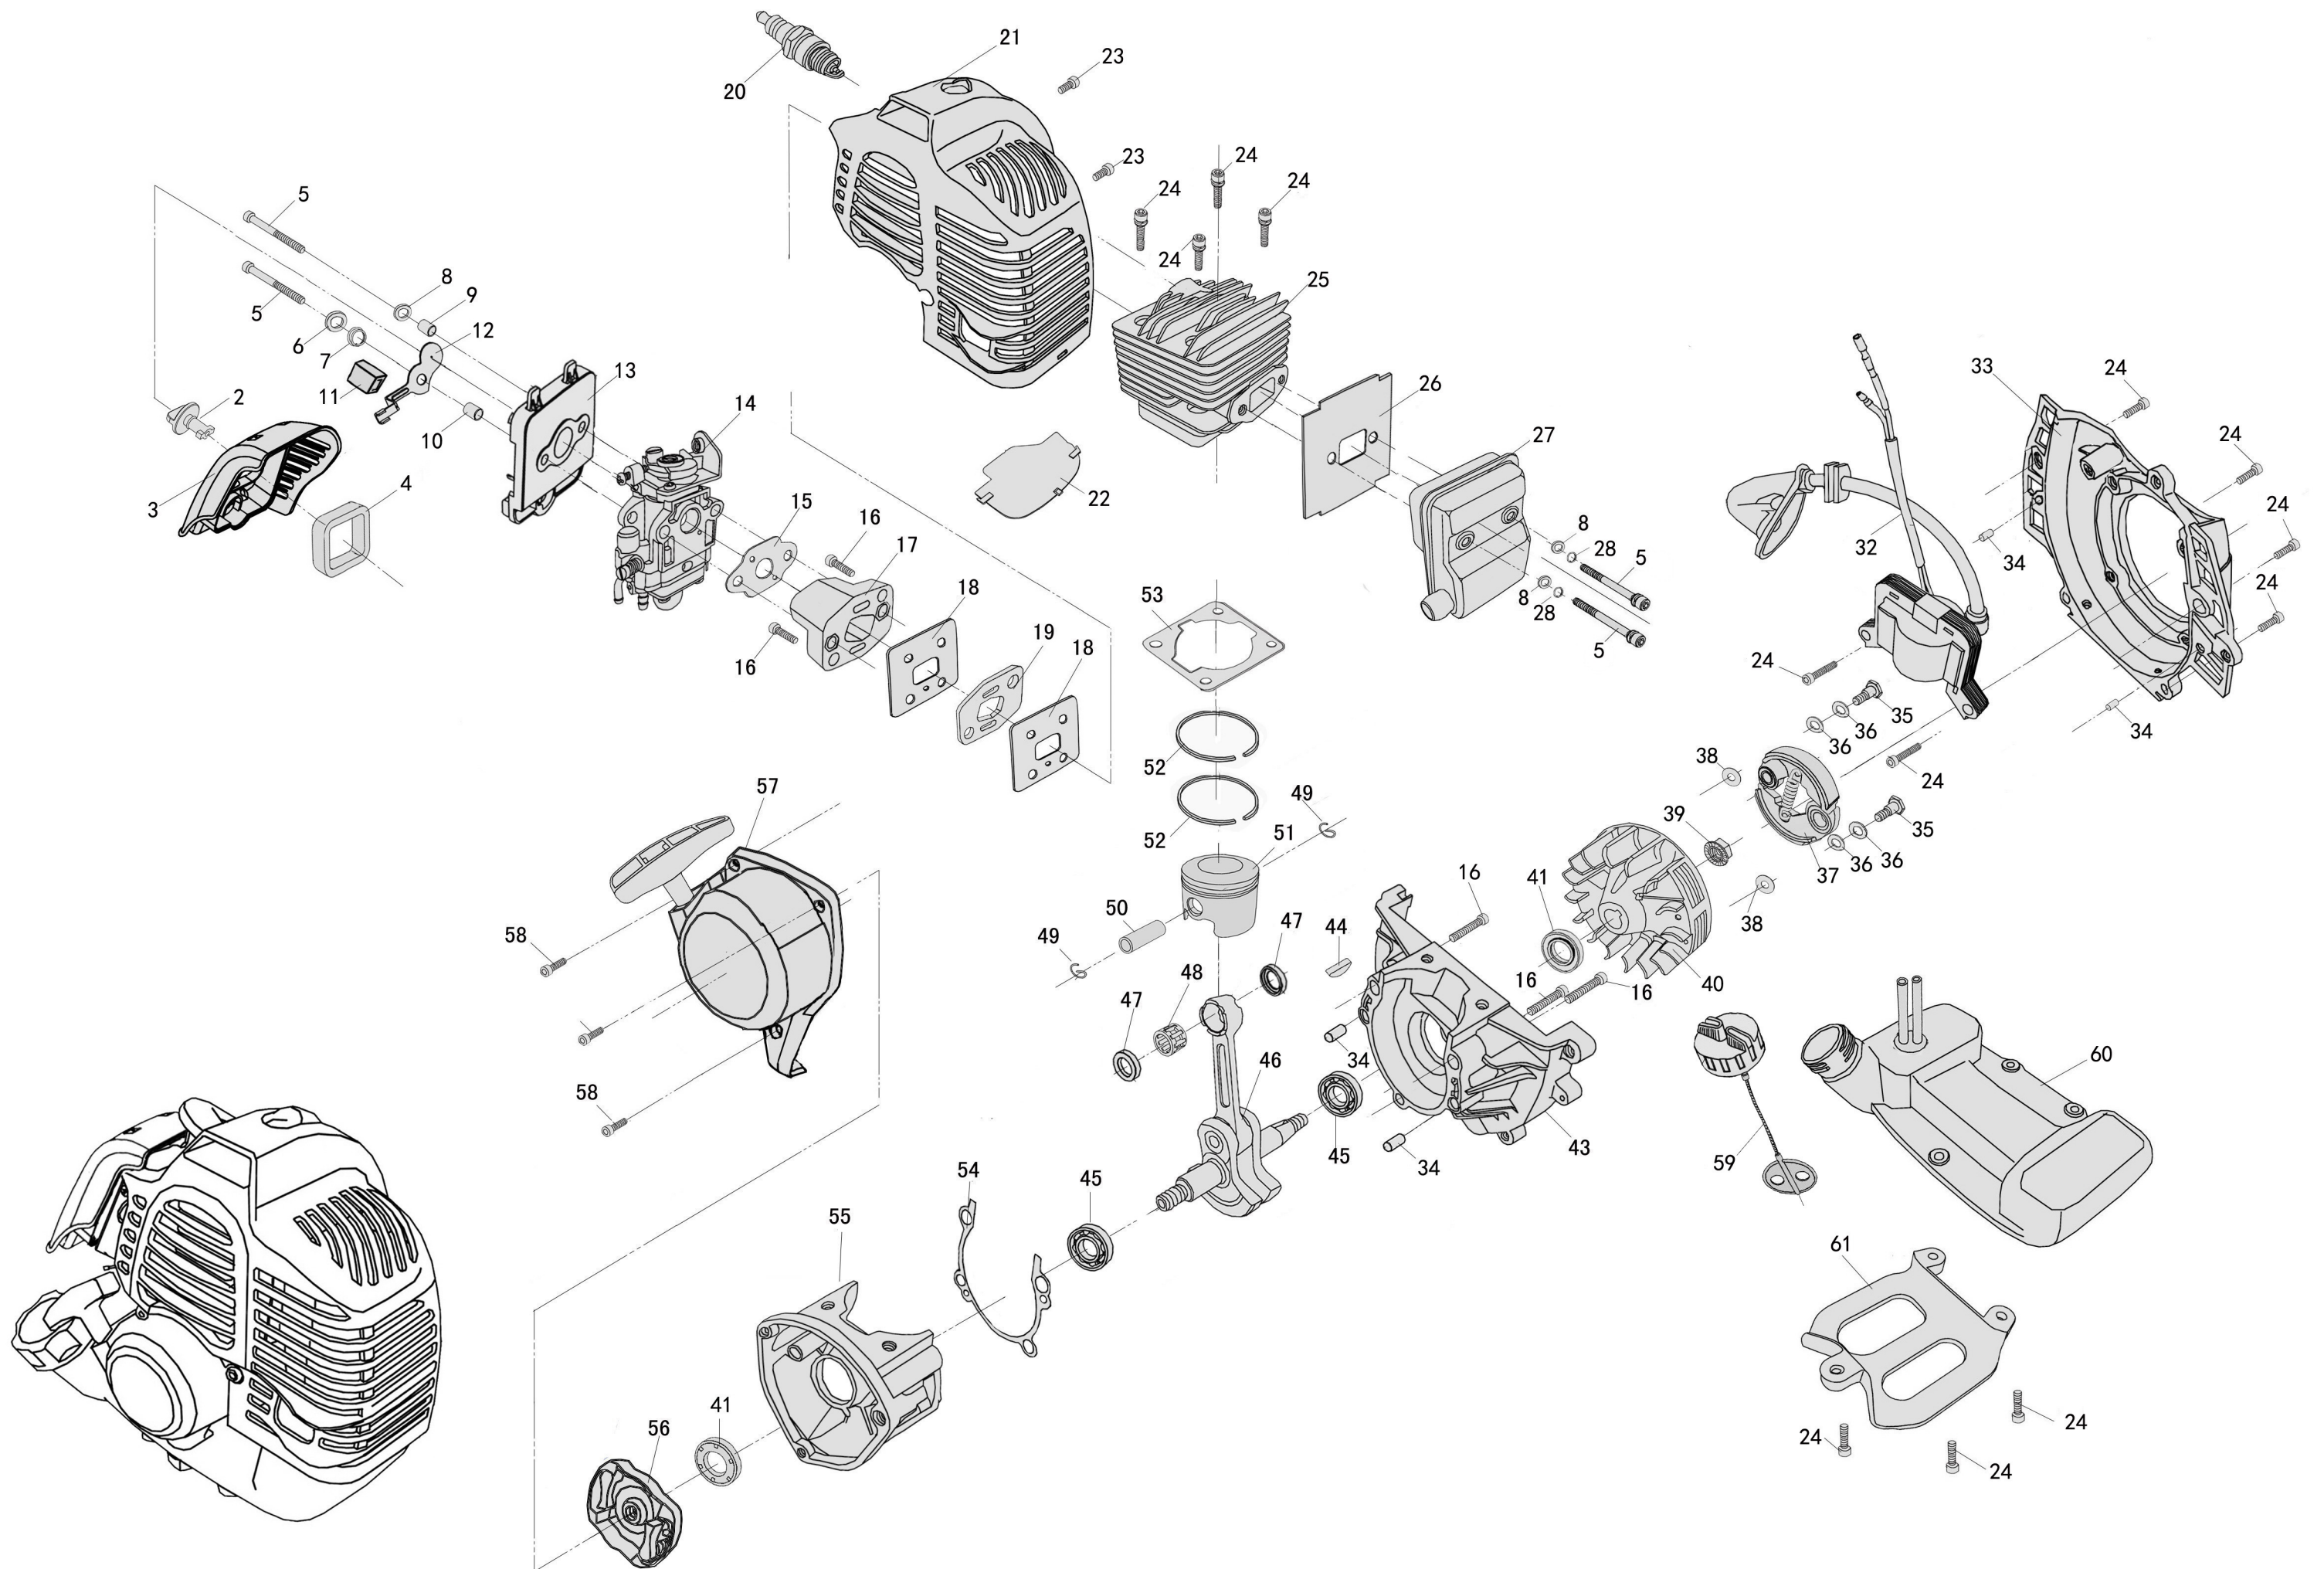

Spare parts list for RPB260 Engine

Pozice	Obj.číslo	Popis	Počet
2	11605-164350-JR0	Air Filter Knob	1
3	11404-162120-JR0	Cover-Air Fiilter	1
4	11404-164150-000	Sponge-Air Filter	1
5	04-15136-253	Screw/M5×55	4
6	07-01110-B13	Washer φ5×14	1
7	11402-164120-K20	Spring Choke	1
8	07-01100-B13	Washer	3
9	11404-162070-000	Inbuilt-Air Filter(Short)	1
10	11404-162060-000	Inbuilt-Air Filter(Long)	1
11	11402-164470-000	Choke Lever Cover	1
12	11404-164140-000	Choke Knob	1
13	11404-164170-JR0	Air Filter	1
14	11401-250400-000	Carburetor	1
15	11401-250600-000	Carburetor Gasket	1
16	09-32126-253	Screw/M5×25	5
17	11401-164180-JR0	Intake Pipe	1
18	11402-164190-000	Washer-Intake	2
19	11401-164340-JR0	Insulated Plate	1
20	10531-226300-000	Spark Plug	1
21	11402-550110-C20	Cover Cylinder	1
22	11402-550100-C20	Plate	1
23	04-15113-253	Screw/GB/T70.1/M5×8	2
24	09-32122-253	Screw/M5×20	13
25	11401-121110-JZ0	Cyliner	1
26	11401-302000-000	Washer-Muffler	1
27	11401-301500-JW0	Muffler	1
28	07-11109-B13	Spring washer	2
32	11402-226200-000	Ignition Assy	1
33	11402-124010-NP0	Crankcase Side Cover	1
34	16-04113-B10	Pin	4
35	11402-500010-000	Screw Clutch	2
36	07-17210-B10	Spring washer	4
37	11401-500100-000	Clutch Assy	1
38	11402-501920-000	Spring Clutch	2
39	03-01300-354	Nut	1
40	11401-220100-000	Flywheel	1
41	52-01324-900	Seal Oil Gb/T 9877.1	2
43	11402-124050-000	Right Crankcase	1
44	28-04002-B10	Key Fly Wheel Gb/T 1099	1

45	26-06322-C30	Deep Groove Ball Bearing	2
46	11403-120000-000	Crankshaft Assy	1
47	10201-144100-000	Needle Bearing Ball Clip	2
48	30-11205-C30	Needle Bearing Ball	1
49	11401-140020-000	Ring Snap	2
50	11401-140010-000	Piston Pin	1
51	11401-142100-JZ0	Piston	1
52	11401-143100-000	Piston Ring	2
53	11401-124000-000	Cylinder Gasket	1
54	11402-124040-000	Crankcase Gasket	1
55	11402-124030-000	Left Crankcase	1
56	11402-333890-000	Small Pulley	1
57	11402-333010-000	Start Assy	1
58	09-32119-253	Screw/M5×16	3
59	11260-265700-000	Fuel Cap	1
60	11404-264000-000	Fuel Tank	1
61	11402-265150-000	Support Fuel Tank	1