
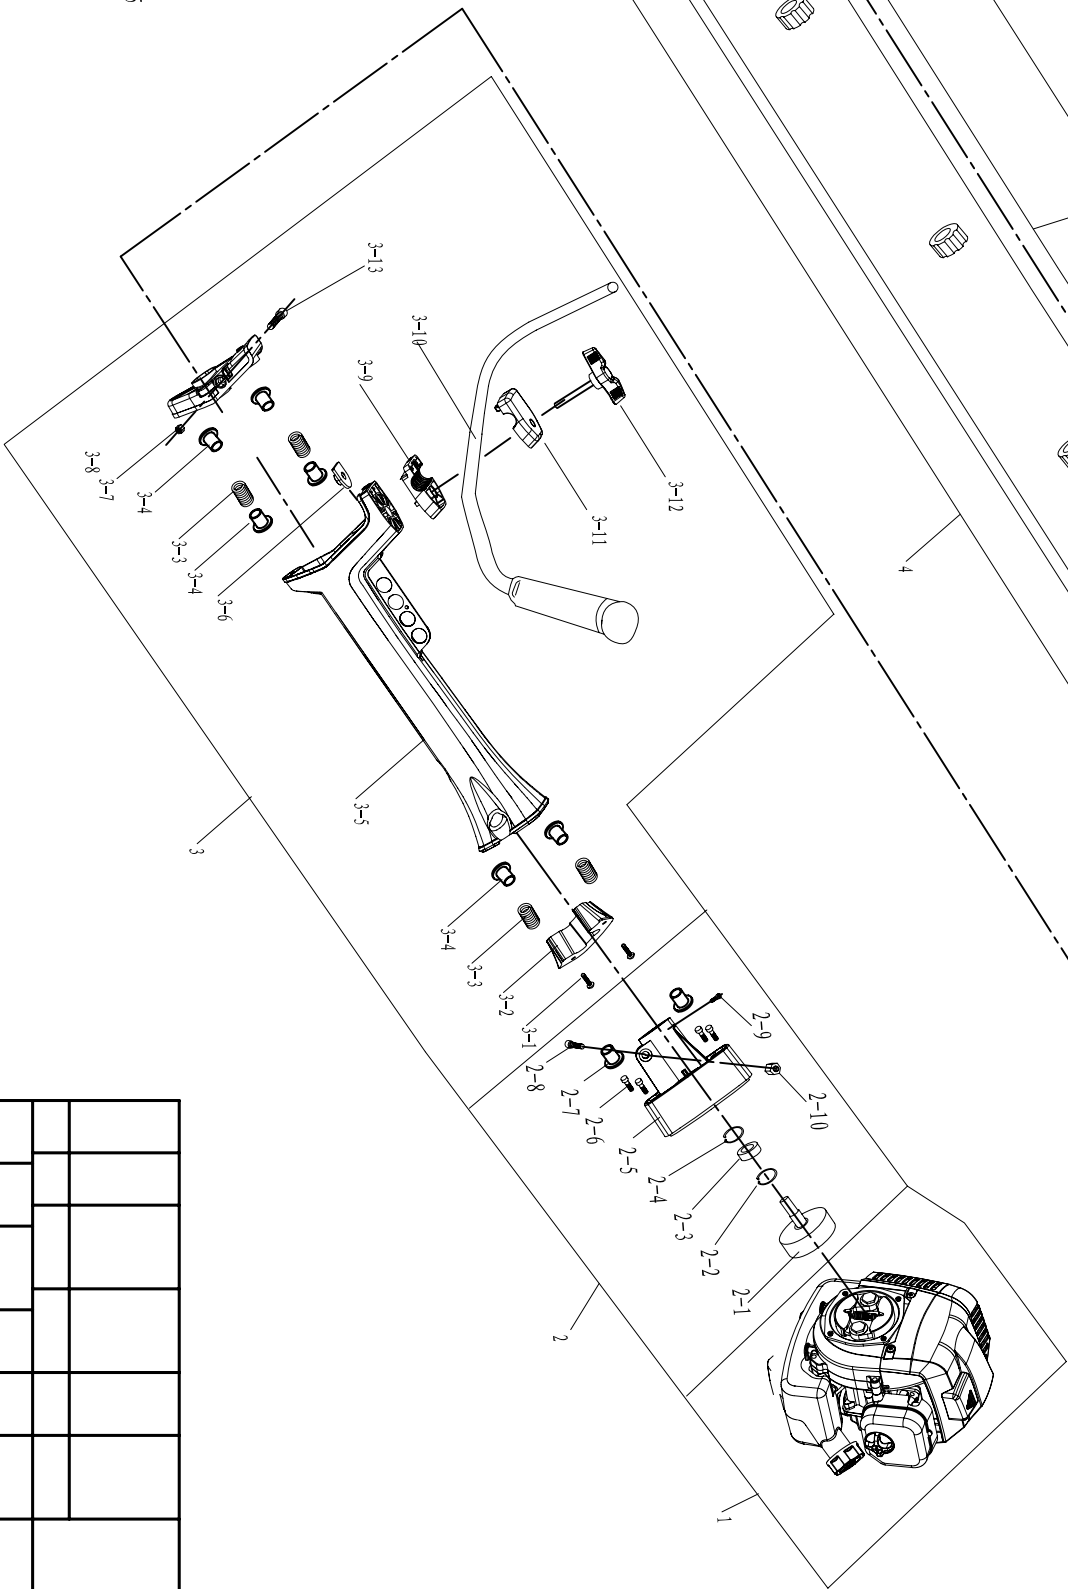
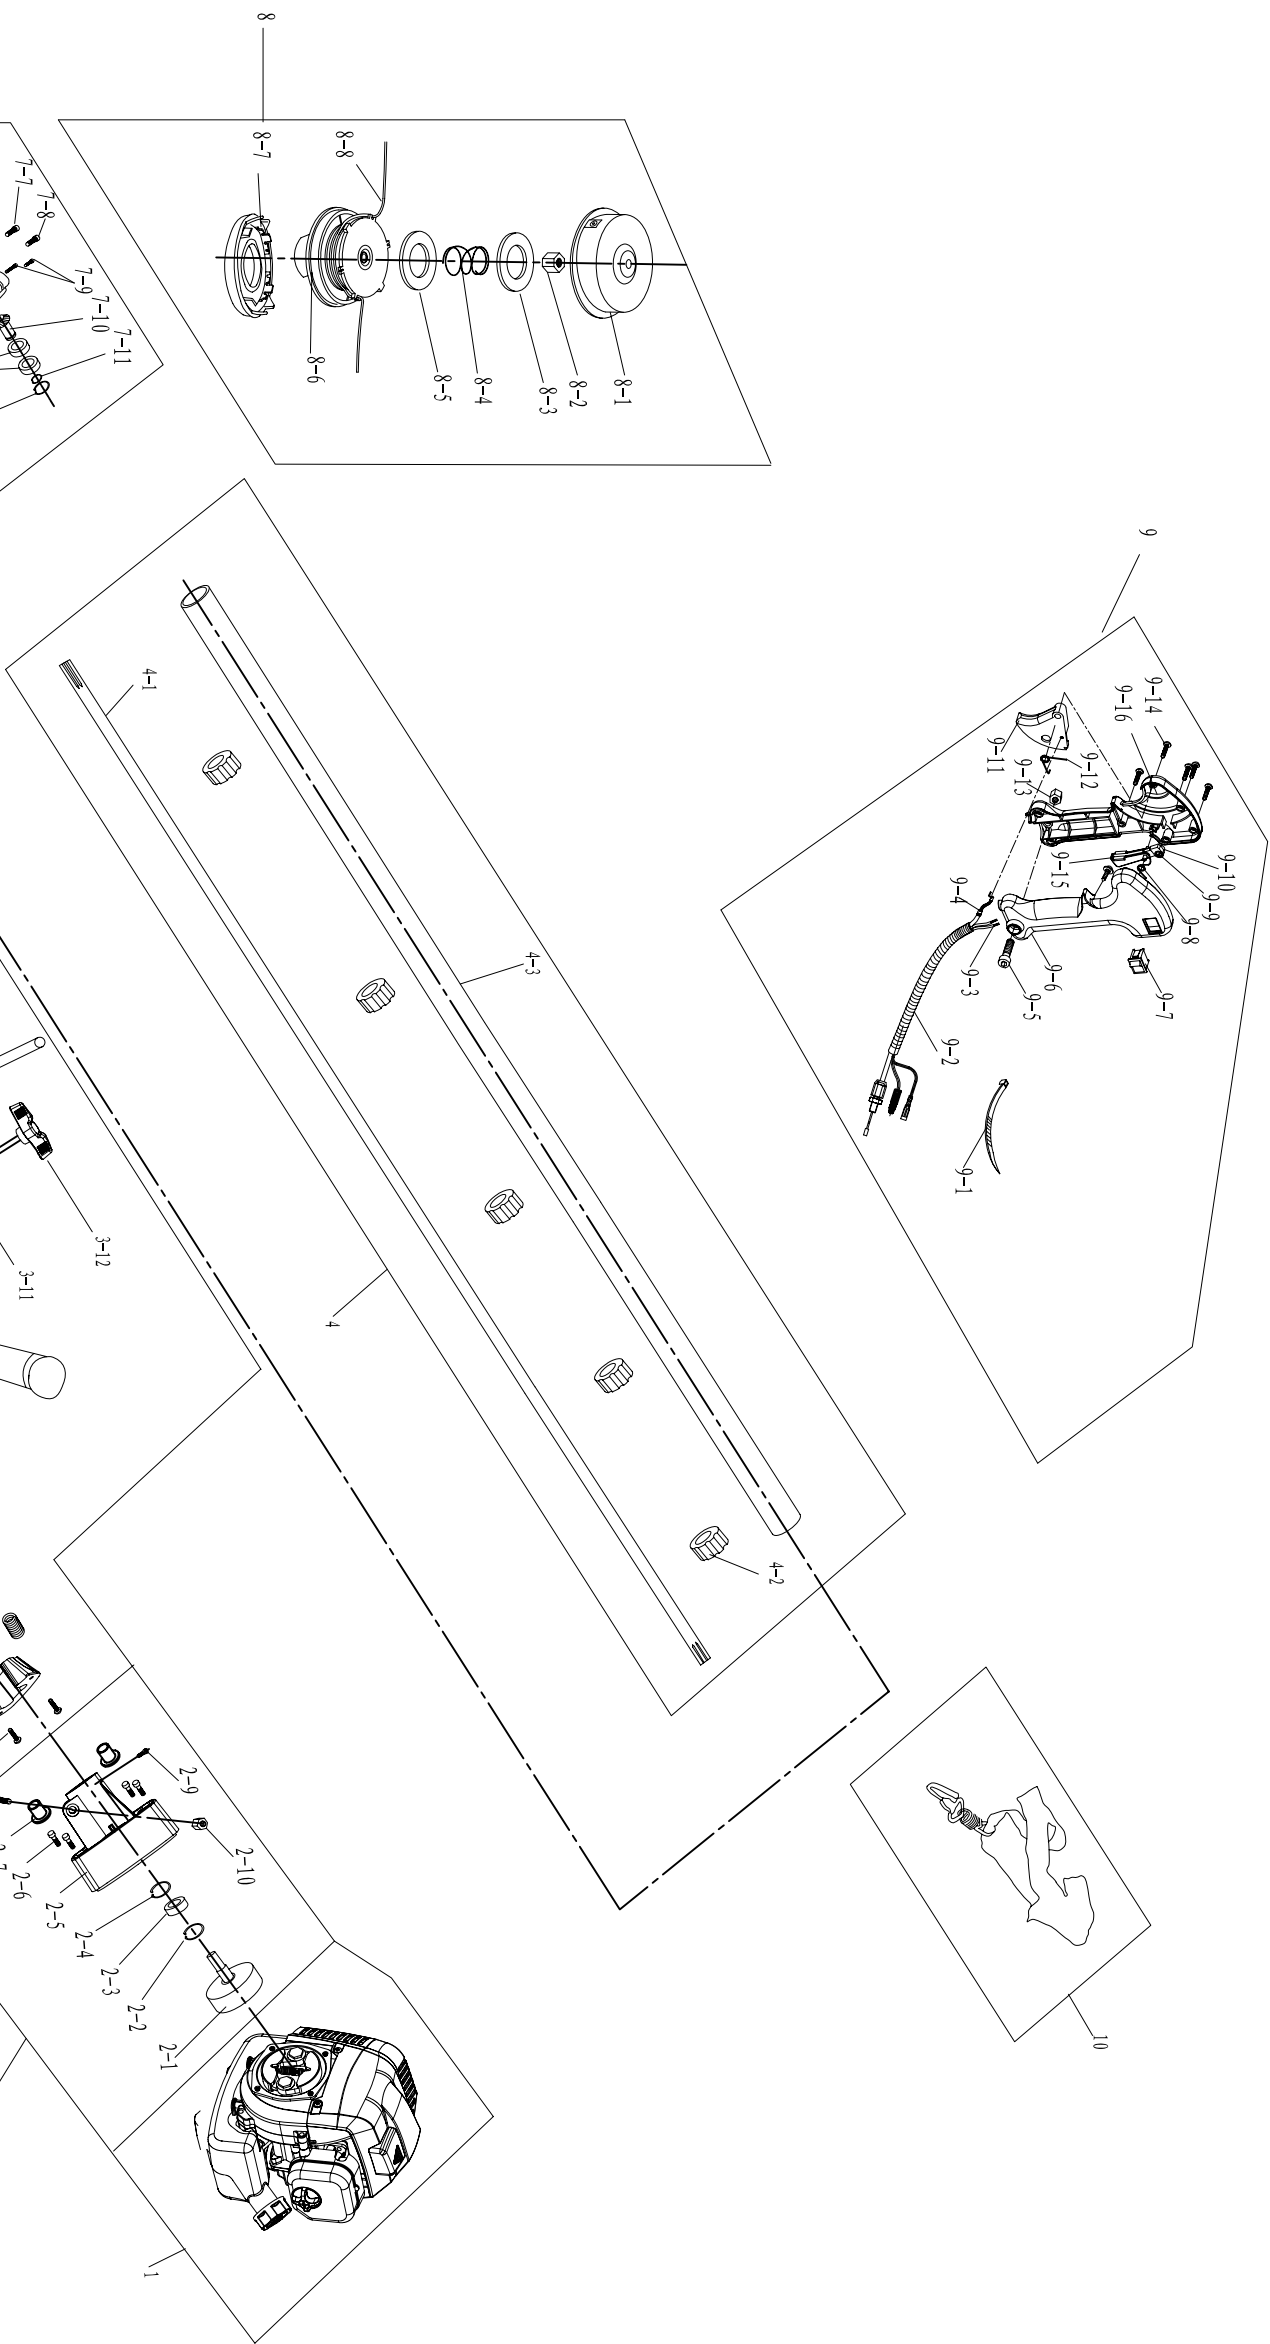


Spare parts list for RPB520			
Pos no	Reference no	En name	dosage
1	WL1E44F-5-1	press plate for oil tank	1
2	WL1E44F-5-2	damping mat for oil tank	1
3	WL1E44F-5-3	tank cap set	1
4	WL1E44F-5-4	oil tank	1
5	WL1E44F-5-5	oil pipe set	1
6	WL1E44F-5-6	knob	1
7	WL1E44F-5-7	air filter cover	1
8	WL1E44F-5-8	air filter element	1
9	WL1E44F-5-9	hex bolt M5x50	2
10	WL1E44F-5-10	bushing $\phi 5.5 \times \phi 7 \times 5$	2
11	WL1E44F-5-11	air filter seat	1
12	WL1E44F-5-12	bolt set M5x25	4
13	WL1E44F-5-13	wind guide	1
14	WL1E44F-5-14	flywheel	1
15	WL1E44F-5-15	woodruff key	1
16	WL1E44F-5-16	oil seal $\phi 30 \times \phi 15 \times 7$	1
17	WL1E44F-5-17	crank case, left	1
18	WL1E44F-5-18	position pin	4
19	WL1E44F-5-19	bearing 6202	2
20	WL1E44F-5-20	crank, left	1
21	WL1E44F-5-21	pin for crank	1
22	WL1E44F-5-22	needle bearing KZK 15x20x10	1
23	WL1E44F-5-23	crank, right	1
24	WL1E44F-5-24	seal mat for crank case	1
25	WL1E44F-5-25	crank case, right	1
26	WL1E44F-5-26	oil seal $\phi 22 \times \phi 12 \times 7$	1
27	WL1E44F-5-27	hex bolt set M5x35	4
28	WL1E44F-5-28	spring washer $\phi 8$	2
29	WL1E44F-5-29	starter plate	1
30	WL1E44F-5-30	gasket for starter	1
31	WL1E44F-5-31	starter cpl.	1
32	WL1E44F-5-32	hex bolt set M5x20	4
33	WL1E44F-5-33	connecting rod	1

34	WL1E44F-5-34	stop collar for piston	2
35	WL1E44F-5-35	needle bearing KBK 10x14x16	1
36	WL1E44F-5-36	piston pin	1
37	WL1E44F-5-37	piston	1
38	WL1E44F-5-38	piston ring	2
39	WL1E44F-5-39	cylinder gasket	1
40	WL1E44F-5-40	muffler bracket	1
41	WL1E44F-5-41	muffler set	1
42	WL1E44F-5-42	cross pan bolt set M5x16	1
43	WL1E44F-5-43	cross pan bolt set M4x10	1
44	WL1E44F-5-44	hex bolt set M6x55	2
45	WL1E44F-5-45	cross bolt M5x12	2
46	WL1E44F-5-46	housing	1
47	WL1E44F-5-47	hex bolt M5x20	4
48	WL1E44F-5-48	spark plug	1
49	WL1E44F-5-49	cylinder	1
50	WL1E44F-5-50	seal mat for air-inlet	1
51	WL1E44F-5-51	air-inlet	1
52	WL1E44F-5-52	hex bolt set M5x25	2
53	WL1E44F-5-53	ignition set	1
54	WL1E44F-5-54	hex bolt set M5x20	2
55	WL1E44F-5-55	gasket for carburetor	1
56	WL1E44F-5-56	carburetor	1
57	WL1E44F-5-57	special flat washer	3
58	WL1E44F-5-58	cluch set	1
59	WL1E44F-5-59	wave spring washer	2
60	WL1E44F-5-60	steps bolt M8x25	2
61	WL1E44F-5-61	hex nut M8	1

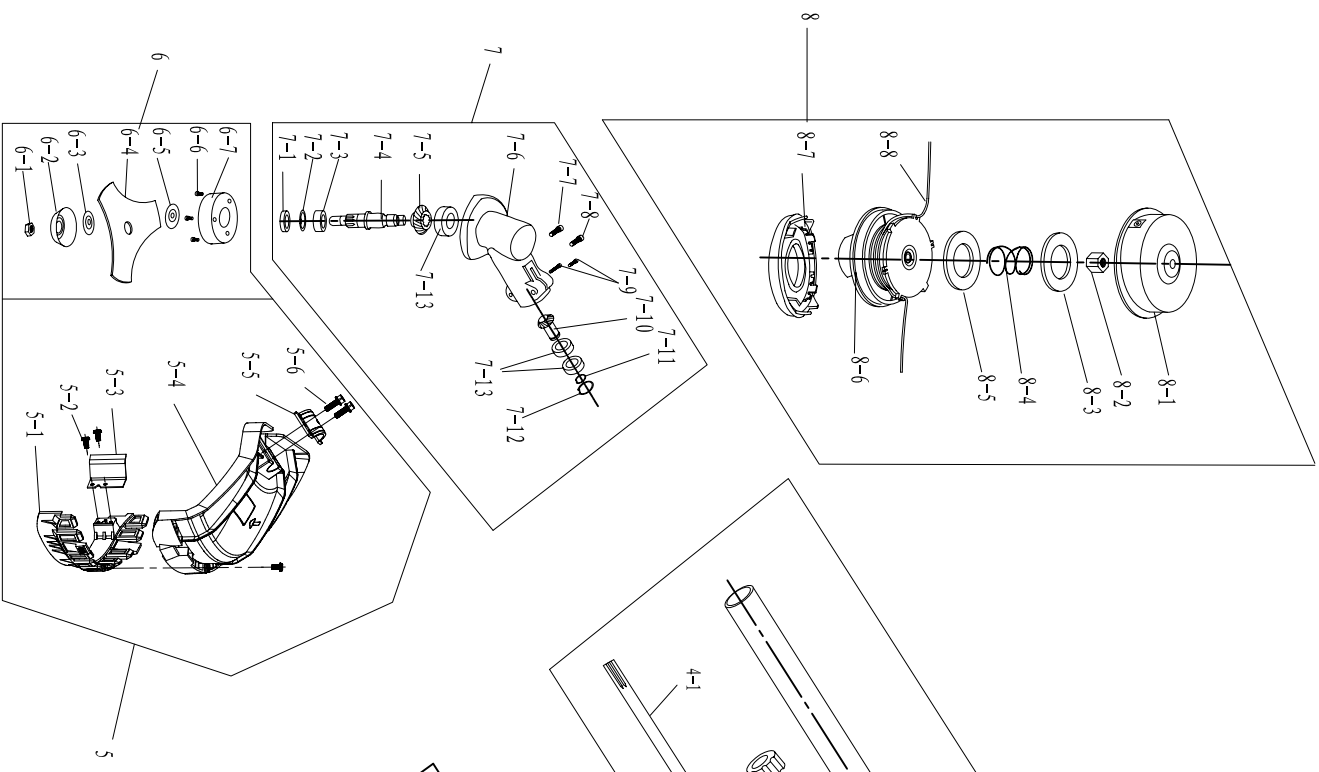

Spare parts list for RPB520 transmission

Pos no	Reference no	En name	dosage
1	WB430-1	engine	1
2-1	WB430-2-1	driven wheel	1
2-2	WB430-2-2	circlip for shaft ϕ 15	1
2-3	WB430-2-3	bearing 6202RS	1
2-4	WB430-2-4	circlip ϕ 35	1
2-5	WB430-2-5	Housing Ass'y	1
2-6	WB430-2-6	Screw M6x35	4
2-7	WB430-2-7	Cushion cover	2
2-8	WB430-2-8	Screw M6x30	1
2-9	WB430-2-9	Bolt M6x12	1
2-10	WB430-2-10	Nut M6	
3-1	WB430-3-1	Screw ST4.2x16	2
3-2	WB430-3-2	Fixed dam	1
3-3	WB430-3-3	Spring 65Mn	4
3-4	WB430-3-4	Cushion cover	6
3-5	WB430-3-5	Hand the leader	1
3-6	WB430-3-6	Connecting plate	1
3-7	WB430-3-7	Nut M6	1
3-8	WB430-3-8	Stationary flat	1
3-9	WB430-3-9	Holder B	1
3-10	WB430-3-10	Bike handle	1
3-11	WB430-3-11	Holder A	1
3-12	WB430-3-12	Knob	1
3-13	WB430-3-13	Bolt M6x35	1
4-1	WB430-4-1	shaaft	1
4-2	WB430-4-2	Bush	5
4-3	WB430-4-3	Pipe	1
5-1	WB430-5-1	Edgings	1
5-2	WB430-5-2	Screw ST4x14	2
5-3	WB430-5-3	Blade	1
5-4	WB430-5-4	Guard	1
5-5	WB430-5-5	Bracket	1
5-6	WB430-5-6	Screw M6x20	2
5-7	WB430-5-7	Nut ST4.8x16	1
6-1	WB430-6-1	Nut M10	1
6-2	WB430-6-2	Cover	1
6-3	WB430-6-3	Holder B	1
6-4	WB430-6-4	3T Blade	1
6-5	WB430-6-5	Holder A	1
6-6	WB430-6-6	Nut M5x12	3
6-7	WB430-6-7	Cover	1
7	WB430-7	Gear case assembly	1
7-1	WB430-7-1	Oil seal	1
7-2	WB430-7-2	Snap ring ϕ 32	1

Spare parts list for RPB520 transmission

Pos no	Reference no	En name	dosage
7-3	WB430-7-3	Bering 6002RS	1
7-4	WB430-7-4	Shaft	1
7-5	WB430-7-5	Pinion	1
7-6	WB430-7-6	Gearcase	1
7-7	WB430-7-7	Screw M6*12	1
7-8	WB430-7-8	Screw M6*16	1
7-9	WB430-7-9	Screw M5*25	2
7-10	WB430-7-10	Pinion	1
7-11	WB430-7-11	Snap ring ϕ 10	1
7-12	WB430-7-12	Snap ring ϕ 26	1
7-13	WB430-7-13	Bearing 6000RS	3
8	WB430-8	Bump head assembly	1
8-1	WB430-8-1	Nut	1
8-2	WB430-8-2	Inner spool cap	1
8-3	WB430-8-3	Washer	1
8-4	WB430-8-4	SPring	1
8-5	WB430-8-5	Washer	1
8-6	WB430-8-6	Inner spool	1
8-7	WB430-8-7	Inner spool cap	1
8-8	WB430-8-8	String	1
9-1	WB430-9-1	Ribbon	1
9-2	WB430-9-2	Hose	1
9-3	WB430-9-3	Stop Switch Wire	1
9-4	WB430-9-4	Throttle Cable	1
9-5	WB430-9-5	Screw	1
9-6	WB430-9-6	Holder A	1
9-7	WB430-9-7	Stop Switch	1
9-8	WB430-9-8	Spring	1
9-9	WB430-9-9	Screw ST3x12	1
9-10	WB430-9-10	locking press button	1
9-11	WB430-9-11	Tigger	1
9-12	WB430-9-12	Spring	1
9-13	WB430-9-13	Screw M6	1
9-14	WB430-9-14	Screw ST4x14	6
9-15	WB430-9-15	The trigger control arm	1
9-16	WB430-9-16	Holder B	1
10	WB430-10	Harness Ass'y	1