



**Spare parts list for RPCS3835**

Pos no	Reference no	English name	QTY
1	YD2500-92402	Nut	2
1	YD2500-92201	Nut	1
2	YD3800-21110	Muffler Assy	1
3	YD3800-21001	Washer-Muffler	1
4	YD3800-21002	Nut	2
5	YD2500-90121	Screw	4
6	YD3800-90031	Screw	1
7	YD3800-13903	Plate	1
8	YD3800-26200	Spark Plug	1
9	YD3800-12111	Cylinder	1
10	YD3800-12501	Washer-Cylinder	1
11	YD3800-14311	Ring-Pistion	2
12	YD3800-14210	Pistion	1
13	YD3800-14001	Pin-Pistion	1
14	YD3800-14002	Ring-Snap	2
15	YD3800-14803	Ring Bearing	2
16	YD3800-96113	Small Bearing-Needle	1
17	YD3800.GF-14100	Crankshaft Assy	1
18	YD3800-16001A	Washer-Intake	1
19	YD3800-16111A	Intake Boot	1
20	YD3800-18203A	Washer-Carburetor	1
21	YD3800-18200	Carburetor	1
22	YD3800-91231	Screw	13
23	YD3800-16141A	Grommet-Inner	1
24	YD3800-16318	Washer-Air Filter	1
25	YD3800.7-18201	Screw	2
26	YD3800.9-15201	Cover-Top	1
27	YD3800-91232	Screw	3
28	YD3800-24111	Choke Knob	1
29	YD3800-24112	Support-Choke Knob	1
30	YD3800-16211	Air Filter	1
31	YD3800.9-16301	Cover-Air Filter	1
32	YD4500-16310	Nylon Gasket	1
33	YD3800-16302	Knob-Air Filter	1
34	YD3800-22111	Clutch Retainer	1
35	YD3800-22113	Spring-Clutch	1
36	YD3800-22112	Clutch Support	3
37	YD3800-22101	Gasket-Clutch	1
38	YD3800-22121	Drum-Clutch	1
39	YD2500-96112	Bearing-Needle	1
40	YD3800-17001	Worm	1
41	YD2500-90201	Screw	5
42	YD3800-17301	Cover-Oil Pump	1
43	YD3800-17200	Oil Pump	1
44	YD3800-17129	Hose Oil Leter	1
45	YD3800-17128	Hose Oil Outlet	1
46	YD4500-18023	Spring-Hose Oil	2
46	YD4500-18023	Ring-Hose Fuel	1
47	YD3800-17208	Washer-Oil Pump	1
48	YD3800-95014	Big Seal Oil	1
49	YD3800-13006	Screw	1
50	YD3800-13001	Chain Catcher	1
51	YD3800-12128	Screw	2

52	YD3800-90122	Screw	4
53	YD3800-93211	Circlip	1
54	YD3800-17403	Fuel Injection Nozzle	1
55	YD3800-13101	Right-Crank Case	1
56	YD3800-94012	Pin	3
56	YD3800-94012	Pin	2
57	YD3800-96012	Bearing	1
57	YD3800-96012	Bearing	1
58	YD3800-13090	Washer-Chankshaft	1
59	YD3800-13201	Left-Crank Case	1
60	YD3800-95012	Small Seal Oil	1
61	YD4500-94604	Key-Flywheel	1
62	YD3800.GF-15110	Flywheel	1
63	YD2500-92102	Nut-Flywheel	1
64	YD3800.9-15120	Baffle-Fan	1
65	YD3800-91234	Screw	1
65	YD3800-91234	Screw	1
66	YD2500-93011	Washer-Pully Starter	1
67	YD3800.2-25215	Flange-Starter	1
68	YD4500.4-25216	Spring	1
69	YD3800.2-25211	Pully Starter	1
70	YD3800-25213	Spring Starter	1
71	YD3800.2-25212	Spring Starter Case	1
72	YD3800.9-25110	Cover-Starter	1
73	YD2500-25302	Rope Jacket	1
74	YD3800-25301	Rope-Starter	1
75	YD2500-25318	Washer-Starter	1
76	YD2500-25311	Handle-Starter Pa6+Gf30	1
77	YD2500-25312	Ring-Handle Pa6+Gf30	2
78	YD2500-25313	Spring	1
79	YD3800-26155	Petainer Switch	1
80	YD3800-26151	Wire-Stop	1
81	YD3800-26110	Ignition	1
82	YD3800-90004	Screw	2
83	YD3800-90222	Screw	5
83	YD3800-90222	Screw	1
84	YD3800-91212	Screw	1
85	YD3800-17134	Vent	1
86	YD3800-27112	Plug-Pad(Small)	1
87	YD3800-27211	Pad-Rubber Cushioning(Long)	1
88	YD3800-13901	Base	1
89	YD3800-27111	Pad-Rubber Cushioning(Short)	1
90	YD3800-27213	Plug-Pad(Big)	1
91	YD3800-24002	Support-Rod Throttle	1
92	YD3800-24515	Spring-Handle	1
93	YD3800-94102	Pin-Trigger	1
94	YD3800-24212	Spring-Trigger	1
95	YD3800-24211	Trigger	1
96	YD3800-24001	Rod-Throttle	1
97	YD3800-13911	Spring	1
98	YD3800-27215	Damping Dog	1
99	YD3800-18300	Tank Case	1
100	YD3800-18001	Support-Balance	1
101	YD3800-18013	Cover-Balance	1
102	YD3800-18014	Balance	1
103	YD3800-18015	Cover-Balance	1

104	YD3800-18431	Oil Vacuole Inlet	1
105	YD3800-18101A	Fuel Tube	1
106	YD3800-18104	Support-Hose Fuel	1
107	YD3800-18432	Return Pipe-Oil Vacuole	1
108	YD3800-18103	Fuel Filter	1
109	YD3800-18432	Pipe Joint	1
110	YD3800-18105	Mouse	1
111	YD3800-19200	Oil Filter	1
112	YD3800-18032	Cap-Fuel Oil	1
113	YD3800-17112	Cap-Hose Oil	1
114	YD3800-18033	Washer-Fuel Oil Cap	1
115	YD3800-17113	Washer-Oil Oil Cap	1
116	YD3800-17111	Hangers	2
117	YD3800-24411	Cover-Handle	1
118	YD3800-24214	Lever-Trigger	1
119	YD3800-91335	Screw	1
120	YD2500-26190	Switch-Stop Assy	1
121	YD2500-18410	Oil Vacuole	1
122	YD3800-17004	Palte	1
123	YD3800-22220	Screw	1
124	YD3800-22212	Plate-Chainadjusting	1
125	YD3800.2-24510	Handle	1
126	YD3800-24513	Plate-Handle Spring	1
127	YD2500-91320	Screw	2
128	YD3800-22251	Plate	1
129	YD2500-94011	Pin	1
130	YD3800-23111	Band Brake	1
131	YD3800-91211	Screw	3
132	YD3800-23108	Plate	1
133	YD3800-23113	Spring	1
134	YD3800-23110	Plate-Brake	1
135	YD4500-22220	Pin	1
136	YD4500-22201	Screw Chain Adjusting	1
137	YD4500-22211	Sprocket-Chainadjusting	1
138	YD3800-27301	Brake Housing	1
139	YD3800-23191	Main Lever	1
140	YD2500-94013	Pin	1
141	YD3800-23192	Vice Lever	1
142	YD3800-23013	Spring	1
143	YD3800-23012	Support-Spring Lever	1
144	YD3800-23123	Spring	1
145	YD3800-23122	Leverage-Brake	1
146	YD3800-23121	Support-Leverage	1
147	YD3800-23036	Washer	1
148	YD3800-23031	Spring	1
149	YD3800.GF-23011	Lever-Chain Brake	1
150	YD3800-23033	Tube-Lever Chain Brake	1
151	YD3800-90123	Screw	1
152	YD3800-22910	Bar 14inch	1
153	YD3800-22300	Chain 14 inch	1
154	YD3800-90221	Screw	1
155	YD2500-92101	Nut	2
156	YD3800-13002	Spike	1
ZC1	YD3800.GF-14000	Crankshaft Piston Assy	1
ZC2	YD3800-22110	Clutch Assy	1
ZC3	YD3800-13100	Right Crankcase Assy	1

ZC4	YD3800-13200	Left Crankcase Assy	1
ZC5	YD3800.9-25000	Starter Assy	1
ZC6	YD3800-13930	Base Assy	1
ZC7	YD3800-19299	Tank-Assy	1
ZC8	YD3800-18010	Balance Assy	1
ZC9	YD3800-23000	Brake Assy	1